



For enquiries contact GUBI A/S - CVR: 17940384  
Klubiensvej 7-9. 2150 Nordhavn. Copenhagen, Denmark  
T +45 69 15 60 60 – [order@gubi.dk](mailto:order@gubi.dk)  
[GUBI.COM](http://GUBI.COM)

---

# GUBI

MAINTENANCE INSTRUCTIONS  
*for*  
C-Chair Outdoor Dining  
F-Chair Outdoor Lounge

### TEAK

Teak wood will age and change color over time, gaining a silvery-grey patina over time as it is exposed to the sunlight and weather.

Teak wood will also naturally develop minor splits and cracks. This will particularly be visible on the end grain. This is a naturally occurring process and is not a fault in the wood.

Dust your wood furniture often to prevent the buildup of dust. For best result always wipe in the direction of the wood grain.

Clean up spilled drinks as quickly as possible with an absorbent cloth.

Remove grease and other dirt as quickly as possible with a soft brush or cleaning pad and mild soapy water. Always scrub with the grain for best results.

Rinse the furniture with lukewarm water afterwards to prevent stains and leave to dry.

Always use coasters, backing or placemats between the wood surface and items to prevent scratching or staining. Do not place heat sources, such as hot plates, serving pieces and other hot items, directly on your furniture.

Do not pressure wash any teak furniture as this can cause damage.

Wood breathes, so do not cover the furniture.

### VIRO WICKER WEAVING

For the Viro wicker weaving, gently clean with water and a sponge. If required, use a mild soapy water. Always rinse the furniture with lukewarm water afterwards to prevent stains. Allow to air dry.