

## SAFETY INSTRUCTIONS

English

### • **WARNING: KEEP OUT OF REACH OF CHILDREN**

- Do not teach children to use this lighter.
- Contains flammable gas under pressure.
- Aim the lighter away from face and clothing when lighting or adjusting of the flame.
- Never expose to prolonged sunlight or heat above 50°C.
- Do not refill near open fire.
- Never puncture or put in fire.
- Do not keep lighter lit for more than 10 seconds.
- Be sure flame is out after use.
- Flame may not be visible in daylight.
- This lighter should only be used for lighting candles, fireworks, barbecue or outdoor oven and gas cooker.
- Extreme heat is present above the visible flame. Extra care should be taken to prevent burn injury or fire.

## INSTRUCTIONS

- To refill with BUTANE GAS.
- Click lighter a few times, as if lighting the lighter. (To equalize the empty gas tank to ambient pressure)
- Hold the lighter upside down.
- Insert universal gas-refill and place nozzle into filling valve (A) and pump a few times to fill the gas into the lighter. Do not overfill!  
Wait at least 2 minutes after filling before using the lighter.
- Turn regulator (B) to minimum (-).
- Ignite lighter and adjust regulator by turning (+) slowly. Keep igniting lighter and slowly turning little by little, until there is a flame. Then to desired flame Length.
- Ignite lighter and turn the lock (c) to (LOCK) so to hold the flame in use. After using, turn the lock to (OFF) to turn off the lighter.
- Lighter may not work beyond 1,000 meters altitude.

